## 10 YEAR MANUFACTURER'S

### LIMITED WARRANTY

All parts of this GOURMETIER FAUCET are warranted to the original retail purchaser to be free from defects in material and workmanship for a period of Ten(10) years from the date of purchase as shown on the purchaser's receipt.

This warranty is limited to defective parts only, labor charges and/or damage resulting from improper installation, repair or replacements, as well as incidental and consequential damages connected therewith are excluded.

Any damage to this faucet as a result of misuse, abuse, neglect, accident, or improper installation or any use not consistent with the instructions furnished by us, will void this warranty.

Replacement parts can be obtained from your local dealer. Freight cost is not covered by manufacturer.


# CAUTION!!!

- 1. Water lines must be completely flushed before use, to avoid debris & clogs in your water system leading to mal-function and reduction of water flow.
- 2. Warranty to be void if water lines are not flushed before use of new faucet.
- 3. Use of abrasives of any strength may damage the finish of your faucet and void this warranty.

PROBLEMS SHOOTING			
PROBLEM	CAUSE	CORRECTIVE ACTION	
Leaks underneath handle	Bonnet nut has come loose	Remove the handle and tightening the bonnet nut	
Leaks from the spout	Valve seat and spring are worn	Replace the valve seat and spring	
Inconsistent water flow pattern	Aerator is dirty or aged	Release aerator and check on rubber gasket if aged or replace with new aerator	
Faucet is dirty	Caused by stubborn water spot	Clean with mild soap and warm water as often as possible	
Handles works backward	Handle install backward	Rotate the right stem stop assembly 180 degrees	

CODE APPROVAL: LA#M-000018



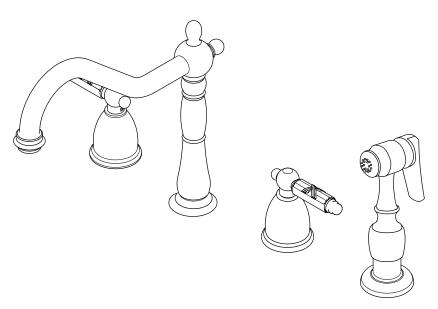

# Parts:

Metal Washer & Lock Nut	Cone Washer & Coupling Nut
X2	X2

www.kingstonbrass.com


TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS TECHNICAL SUPPORT E-mail: service@kingstonbrass.com 12775 Reservoir Street. Chino. CA91710




# INSTALLATION INSTRUCTIONS For Use With GF's Widespread Kitchen Faucets with or without Sprayer

#### BEFORE BEGINNING INSTALLATION


- 1. Flush plumbing lines to clear debris in pipe and plumbing lines to avoid existing clogs into waterway & cartridge system of new faucet fixture.
- 2. Shut off both supply lines after flushing

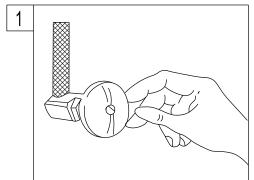


1. Shut off hot and cold water supply under sink. Plug sink drain with cloth to avoid losing small parts. Remove old faucet.

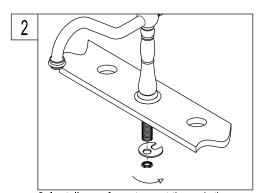


 2. Install new faucet spout through the center hole of sink.
Place mounting washer on spout shanl



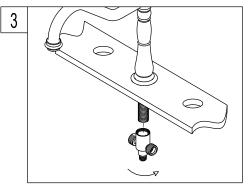


3. Attach Spout Tee on the spout shank.

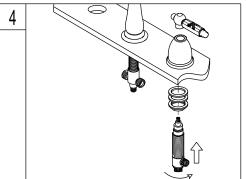


4. Hold the handles in proper position.


Make sure that the top of the faucet handles is 5/8" above the top of the sink.

Mount the metal washer and locknut from underneath the sink. Then reposition escutcheons as necessary to a desired height.

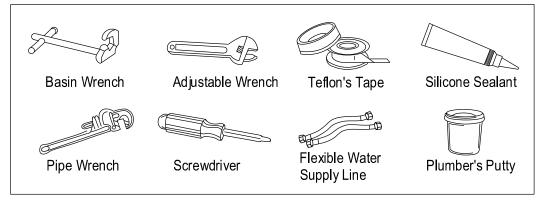


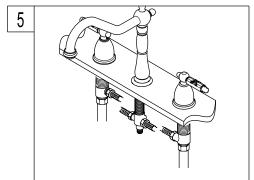


5. Connect the flexible tubes from the supply shank side port to the Spout Tee.
Also reattach the supply lines, turn on the water supply, and check for leaks.

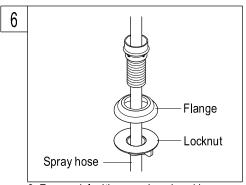

6. For model with spray head and hose, place the spray guide through the fourth hole in the sink, screw the locknut onto the shank and tighten firmly.

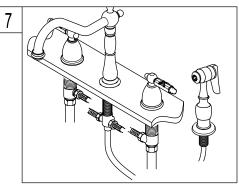

7. Insert the hose through the guide and attach to the fitting on the bottom of the faucet. Attach spray head to the hose.

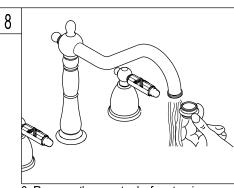

8. Remove the aerator before turning on your new faucet for the first time.
Allow both hot and cold water to run for one minute. Replace aerator.