



ENGINEERING EXCELLENCE

Installation Guide

Single Handle Kitchen Faucet:


- 2PM330
- 2PM331

This product meets the following standards:


- ASME A112.18.1
- ANSI A117.1
- ANSI / NSF 61, SECTION 9
- CUPC / IAPMO LISTED / ADA COMPLIANT
- CONTAINS NO MORE THAN 0.25% WEIGHTED AVERAGE LEAD CONTENT

Thank you for purchasing this Pioneer quality product.


Tools Required

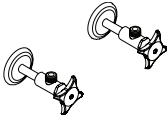

Supply Stops

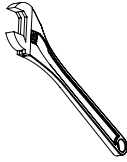

Adjustable Wrench

 


Plumbers Putty

Prior to Installation

- Observe all local plumbing and building codes before you begin installation.
- Carefully shut off both hot and cold water supplies from under the sink.
- Plug the sink drain with a soft cloth to prevent intrusion of debris or the loss of any faucet parts.
- For replacement installations, carefully remove the existing faucet and clean the entire surface of the sink mounting holes.
- Pioneer reserves the right to make changes in the design of faucets without notice as specified in the pricebook.


Faucet Installation

- **Note:-** The faucet spout (D) is supplied with rubber washer (E) to form water-tight seal. Do not use rubber washer and plumbers putty both to form water-tight seal.
- For the faucet with side spray, place the hose guide (B) through the sink hole. Apply adequate amount of plumbers putty or sealant along the boundary of the side spray flange.
- Hand tighten the locknut (C) from underside of the sink. Remove excess plumbers putty or sealant from the side spray flange.
- Insert the side spray and hose (A) through the hose guide (B).
- Slide washer (E) underneath the spout (D).
- Insert the spout (D) through spout mounting surface.
- Slide the spout mounting plate (F) through the spout shank. Thread and tighten the spout mounting nut (G). Do not overtighten.
- Thread the spout hose (H) underneath the spout shank.

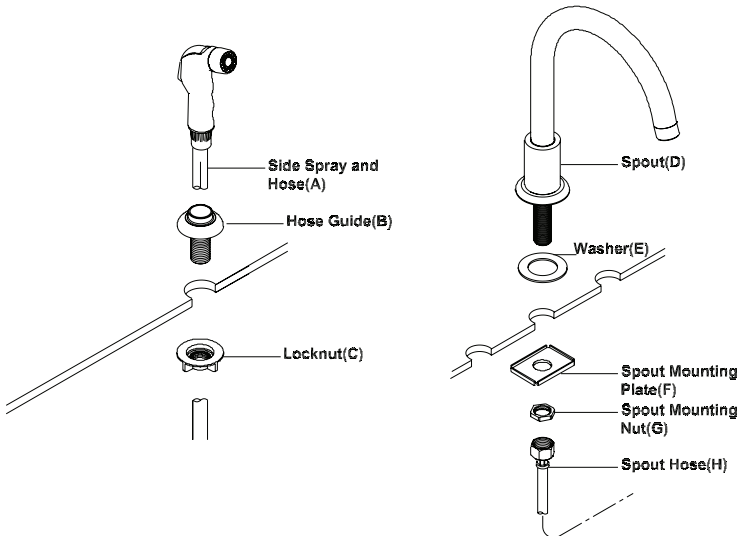


Faucet Installation

- **Note:-** The valve escutcheon (L) is supplied with gasket (M) to form water tight seal. Do not use gasket (M) and plumbers putty both to form watertight seal.
- Place the escutcheon (L) from the top. Ensure the gasket (M) is beneath the escutcheon (L). Slide the valve through the escutcheon and the mounting surface.
- Slide the mounting bracket (N) through the side spray port (J). Thread and use supplied socket tool to tighten the spout mounting nut (P). Do not overtighten.
- For faucet with side spray connect the side spray hose (O) to side spray port (J). Do not overtighten. If the faucet is without side spray then use supplied cap to cover the side spray port (J).
- Connect the spout hose (Q) to the spout port (K). Do not overtighten.

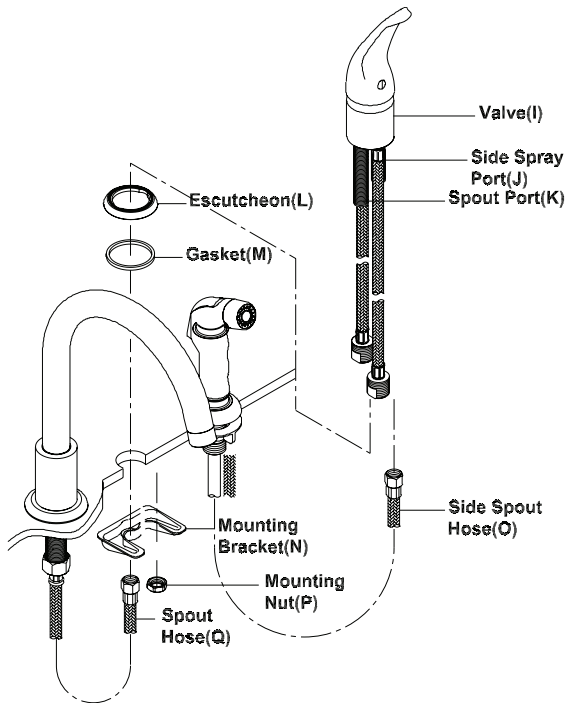

Main Supply Connection

- Connect the valve inlets (R) to inlet supply lines (S). Then connect the supply stops (T) to the inlet supply lines (S) (left is hot water supply and right is cold water supply). Make sure inlet supply lines (S) are securely tighten. Do not over tighten.
- Turn on water. Check for any leaks. Make sure all the connections are secure.
- Remove aerator (U).
- Open the handle.
- Flush and allow water to run at full flow for at least one minute.
- Replace aerator.

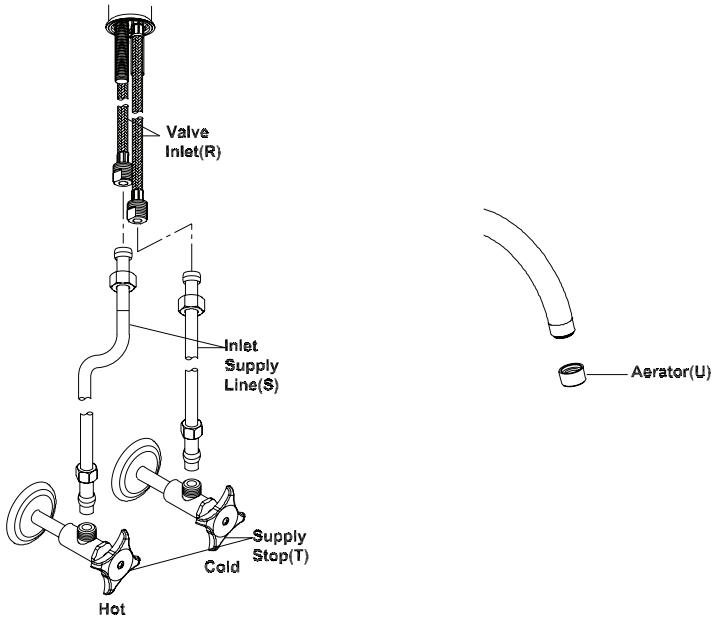

For more care information or trouble shooting inquiries about your Pioneer product, please see the contact information on the back page.



ENGINEERING EXCELLENCE

3325 S. Garfield Ave | City of Commerce, CA 90040
Telephone: (800) 338-9468 | (323) 888-8873 | Fax: (323) 888-9515
Hours: M - F, 7:30am to 5:00pm PST