




TRADITIONAL PLP PULLDOWN FAUCET INSTALLATION INSTRUCTIONS

Model #s:

5500, 5600, 5610, 5200, 5210



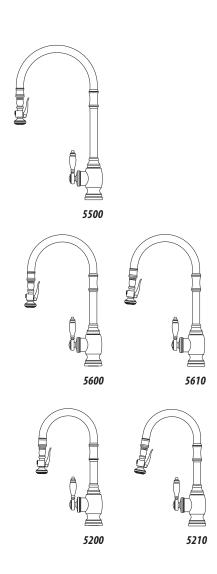

BEFORE YOU BEGIN YOUR INSTALLATION:

1 %

Turn off water supply.

2

Observe all local plumbing codes.

Inspect plumbing for signs of damage. Replace as necessary.



DO NOT use petroleum based products on this faucet.

REQUIRED TOOLS:



Adjustable Wrench




Phillips Screwdriver




Channel Locks

HANDLE POSITION


Waterstone faucets are designed to be installed in 3 different faucet positions. Choose to have the handle on left, front or right. Your faucet is factory configured for the most common positions - a front and right side installation. To reverse this and have the handle positioned on the left, connect the hose for cold water to the hot supply and the hose for hot water to the cold supply. This will maintain the relationship of pulling the handle for hot water or pushing for cold water.

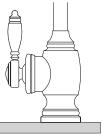



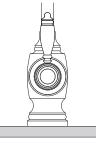


HANDLE IN FRONT

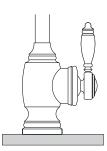


HANDLE ON RIGHT


PULLDOWN FAUCET INSTALLATION

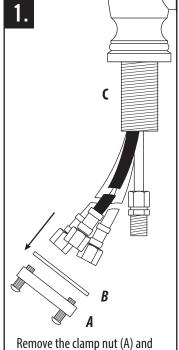


Remove the clamp nut (A) and washer (B) from the threaded shroud (C).

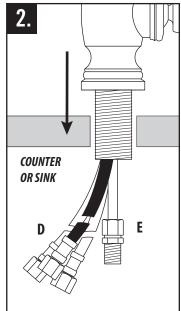

Fit flexible hoses (D) and spray connection tube (E) through hole on counter or sink. (No plumbers putty is required. O-ring seals base).

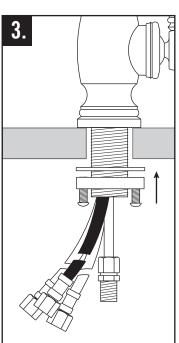


Slide washer and thread the clamp nut onto threaded shroud. Tighten nut snug to underside of sink or counter.

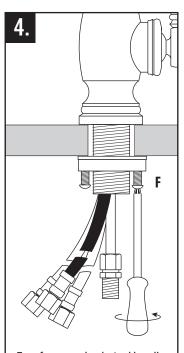


Turn faucet to the desired handle position. Securely tighten clamp screws (F).

HOW TO ADJUST HANDLE POSITION AND HANDLE TENSION

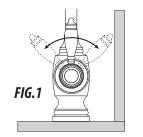



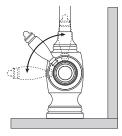


NEW ADJUSTED POSITION
CLEARS BACKSPLASH

On some kitchen countertops, the handle may hit the backsplash when the faucet handle is positioned to the left or right (Fig. 1). Waterstone gives you the option of adjusting the handle 45 degrees to avoid hitting backsplash.


Place a small standard screwdriver in slot at bottom of metal ring that surrounds handle button (A). Gently pry button from handle (B). Unscrew and remove holding screw (C) and washer (D). Hold handle in a vertical position. Wiggle and pull straight off faucet. Rotate handle away from backsplash 45 degrees then slide handle back onto valve stem (E). Insert holding screw with washer and tighten. Snap handle cap back into place. To adjust handle tension, turn ring (F) clockwise to increase or counterclockwise to decrease handle tension.

CONNECTING SUPPLY HOSES


Before connecting supply hoses, flush supply stops to clear any debris. Place a bucket underneath stops and run water for 5 to 10 seconds. Turn water off. Carefully position hot and cold supplies so they will not interfere with other hoses. Connect supply hoses (A) to supply stops (B). **DO NOT** use teflon tape or plumbers putty. Turn water back on and check for leaks.

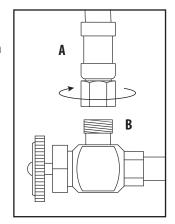

OPTIONAL DECORATIVE BUTTONS

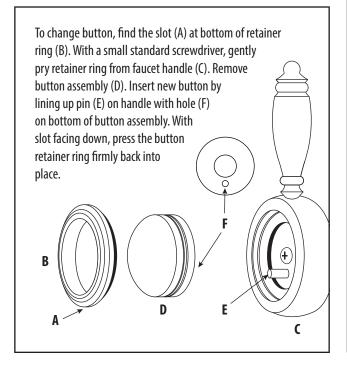


CONNECT THE PULLDOWN SPRAY HOSE

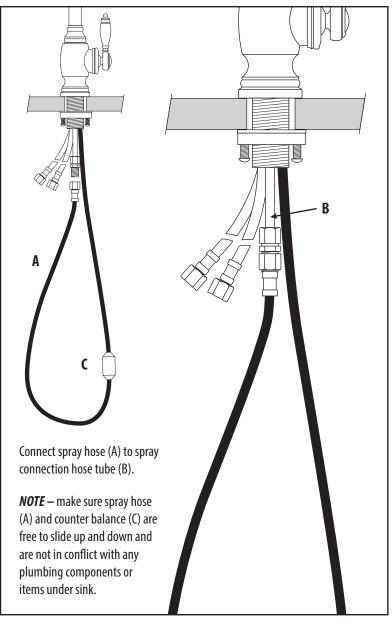



CLEANING DEBRIS SCREEN


1. Turn off water supplies underneath sink and remove any water pressure by opening the faucet handle. В 2. Unscrew sprayer (A) from spray hose by holding knurled swivel (B). C 3. Inspect, remove and clean debris screen (C) in sprayer. Once cleaned, replace debris screen and reattach to swivel. 4. Close faucet handle and turn on water supplies. Make sure sprayer A is secure and sealed by running faucet.

CLEANING AERATOR

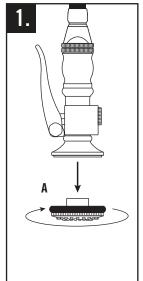

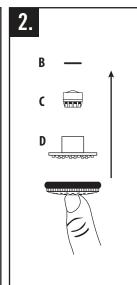


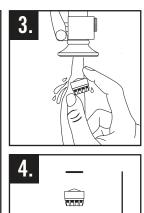


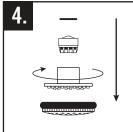



- 1. Gently unscrew and remove spray face (A) by hand.
- 2. To remove O-ring (B), aerator (C) and spray face insert (D), push with finger from bottom.
- 3. Thoroughly rinse aerator with water until all debris is removed.
- 4. Place spray face insert back into spray face and spin until it clicks into place. Next, place aerator and 0-ring into spray face. Gently screw spray face, by hand, snuggly back onto sprayer.


INSTALL SOAP/LOTION DISPENSER (OPTIONAL)

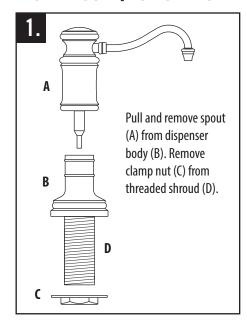


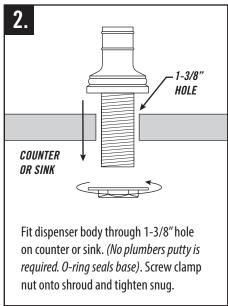

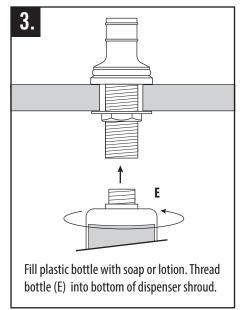


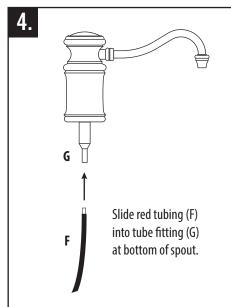


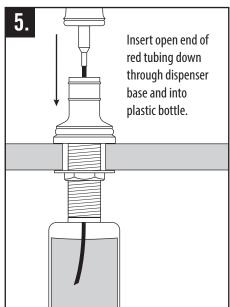


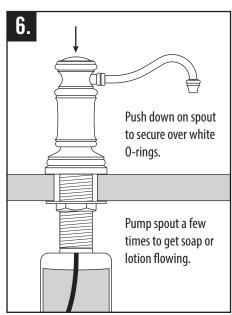


INSTALL AIR SWITCH (OPTIONAL)

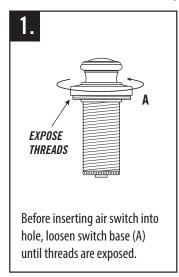


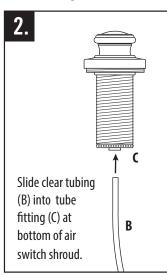


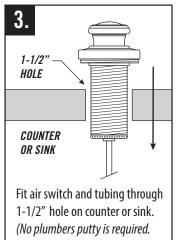



O-ring seals base).

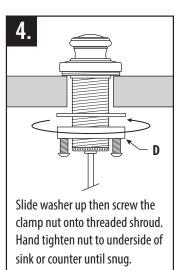

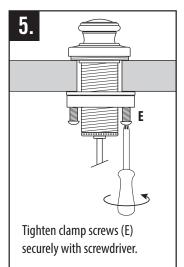


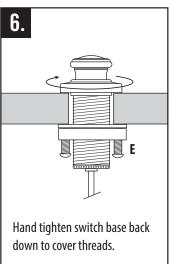


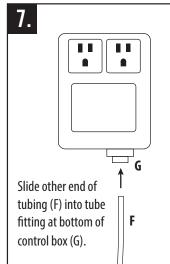


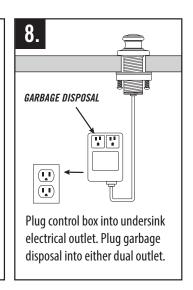



INSTALL SINGLE PORT AIR GAP (OPTIONAL)

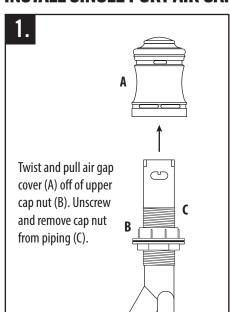


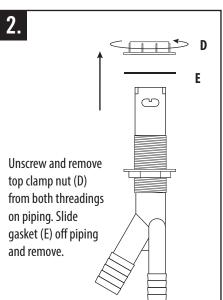

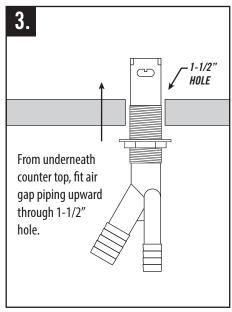


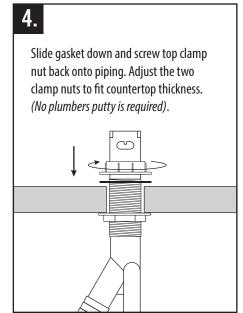

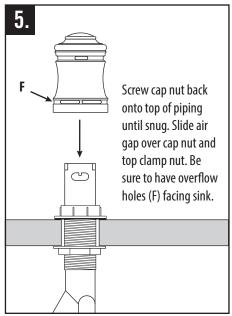


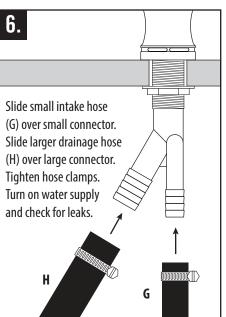


INSTALL DUAL PORT AIR GAP (OPTIONAL)

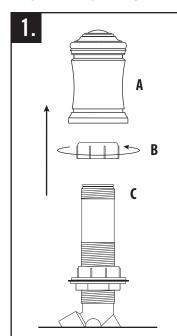


Pull air gap (A) off of upper cap nut (B). Unscrew and remove cap nut from piping (C).

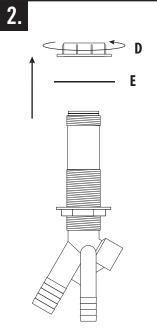

Unscrew and remove top clamp nut (D) from both threadings on piping. Slide gasket (E) off piping and remove.

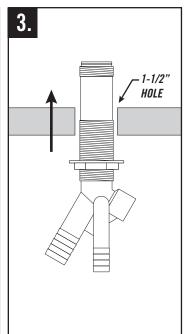

From underneath counter top, fit air gap piping upward through 1-1/2" hole.

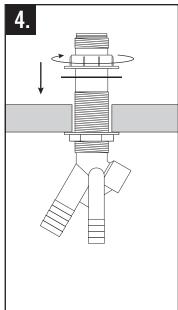

Slide gasket down and screw top clamp nut back onto piping. Adjust the two clamp nuts to fit countertop thickness. (No plumbers putty is required).

