
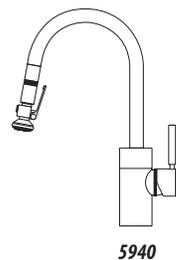
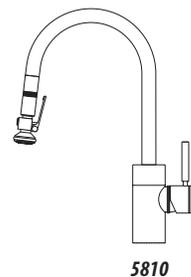
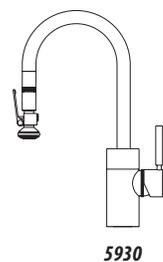
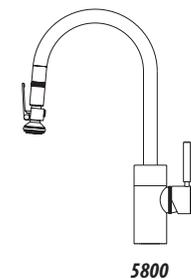
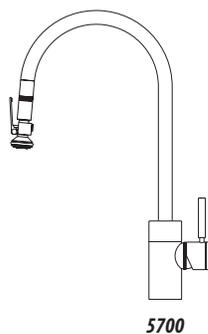
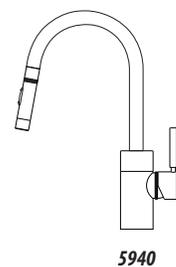
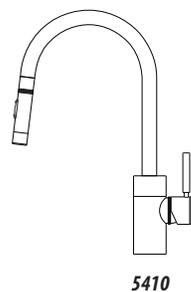
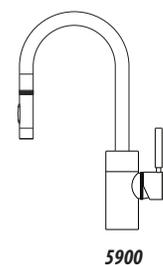
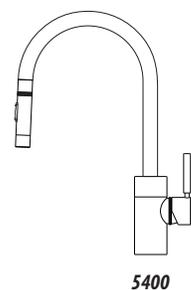


# CONTEMPORARY PLP PULLDOWN FAUCET INSTALLATION INSTRUCTIONS

**Model #s:**

5300, 5400, 5410, 5700, 5800, 5810,  
5900, 5910, 5930, 5940

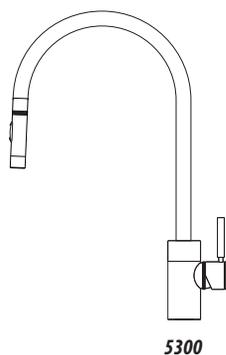

## BEFORE YOU BEGIN YOUR INSTALLATION:

1



Turn off water supply.

2



Observe all local plumbing codes.

3



Inspect plumbing for signs of damage. Replace as necessary.

4



**DO NOT** use petroleum based products on this faucet.

### REQUIRED TOOLS:



Adjustable Wrench




Phillips Screwdriver



Channel Locks

## HANDLE POSITION

Waterstone faucets are designed to be installed in 3 different faucet positions. Choose to have the handle on left, front or right. Your faucet is factory configured for the most common positions - a front and right side installation. To reverse this and have the handle positioned on the left, connect the hose for cold water to the hot supply and the hose for hot water to the cold supply. This will maintain the relationship of pulling the handle for hot water or pushing for cold water.

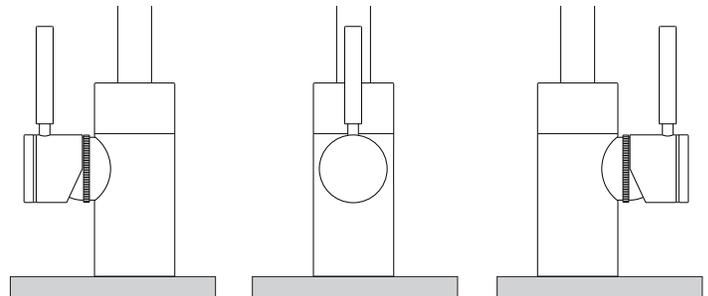


HANDLE ON LEFT

HANDLE IN FRONT

HANDLE ON RIGHT


## PULLDOWN FAUCET INSTALLATION

1.

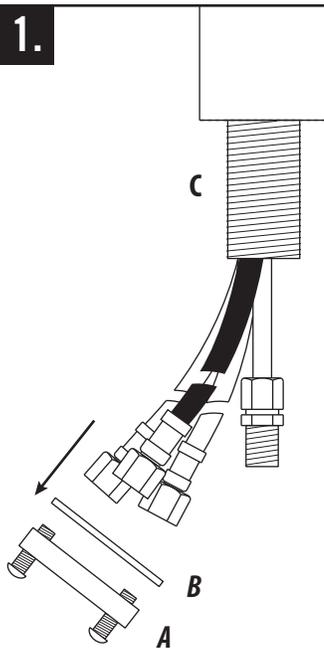


Remove the clamp nut (A) and washer (B) from the threaded shroud (C).

2.

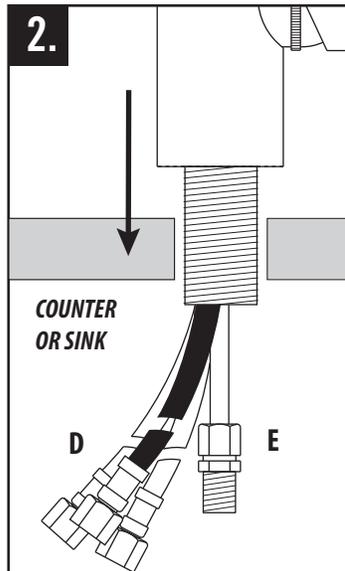


Fit flexible hoses (D) and spray connection tube (E) through hole on counter or sink. (No plumbers putty is required. O-ring seals base).

3.

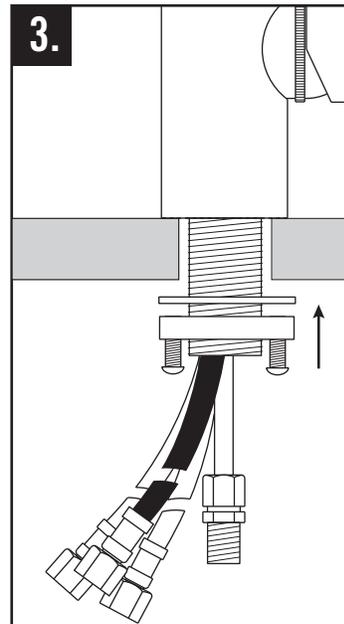


Slide washer and thread the clamp nut onto threaded shroud. Tighten nut snug to underside of sink or counter.

4.

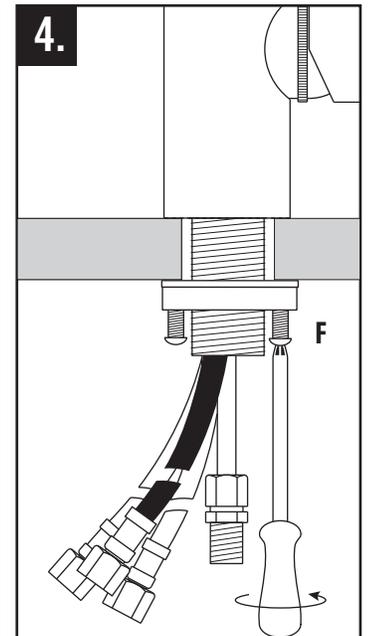


Turn faucet to the desired handle position. Securely tighten clamp screws (F).

# HOW TO ADJUST HANDLE POSITION AND HANDLE TENSION

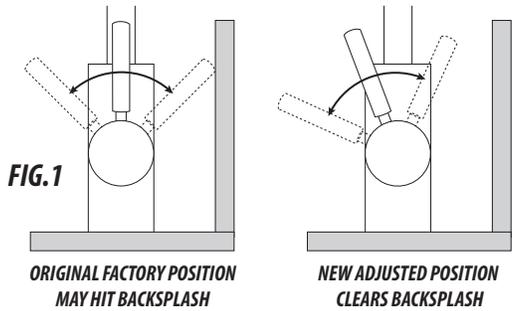


On some kitchen countertops, the handle may hit the backsplash when the faucet handle is positioned to the left or right (Fig. 1). Waterstone gives you the option of adjusting the handle 22.5 degrees to avoid hitting backsplash.

Unscrew and remove metal cap (A) and Hot and Cold Indicator Ring (B). Unscrew and remove holding screw (C) and washer (D). Hold handle (E) in a vertical position. Wiggle and pull straight off faucet. Rotate handle 22 degrees away from backsplash then slide handle back onto valve stem (F). Insert holding screw with washer and tighten. Slide Hot and Cold Indicator Ring onto handle and thread metal cap back into place. To adjust handle tension, turn ring (G) clockwise to increase or counterclockwise to decrease.

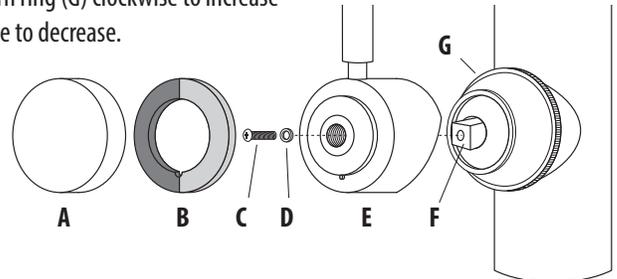


## CONNECTING SUPPLY HOSES

Before connecting supply hoses, flush supply stops to clear any debris. Place a bucket underneath stops and run water for 5 to 10 seconds. Turn water off. Carefully position hot and cold supplies so they will not interfere with other hoses. Connect supply hoses (A) to supply stops (B). **DO NOT** use teflon tape or plumbers putty. Turn water back on and check for leaks.

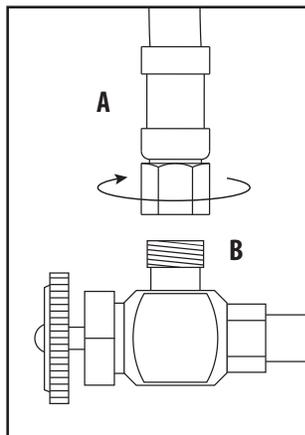

## CONNECT THE PULLDOWN SPRAY HOSE

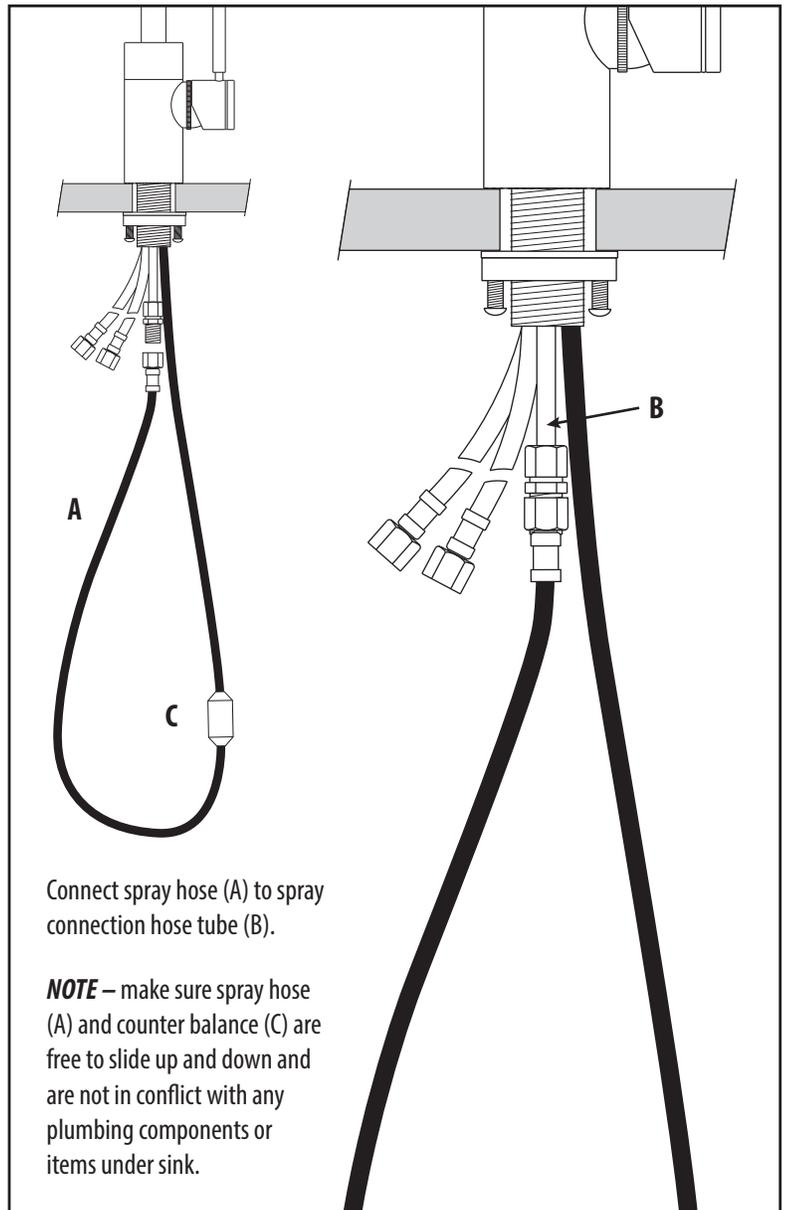


Connect spray hose (A) to spray connection hose tube (B).


**NOTE** – make sure spray hose (A) and counter balance (C) are free to slide up and down and are not in conflict with any plumbing components or items under sink.

## OPTIONAL HOT COLD INDICATOR RING


To reverse, or remove Hot and Cold Indicator Ring, unscrew the metal cap, remove ring and flip. Slide ring back onto handle and screw metal cap back on.

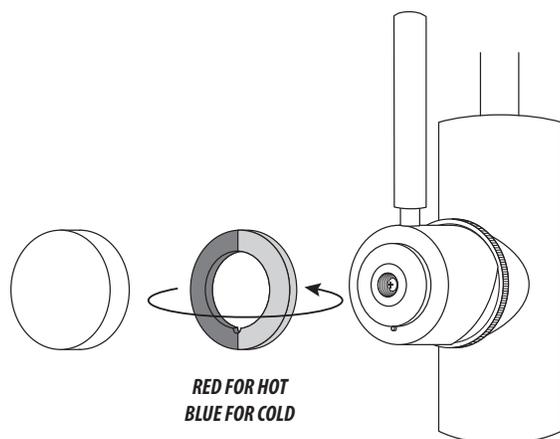

## CLEANING DEBRIS SCREEN

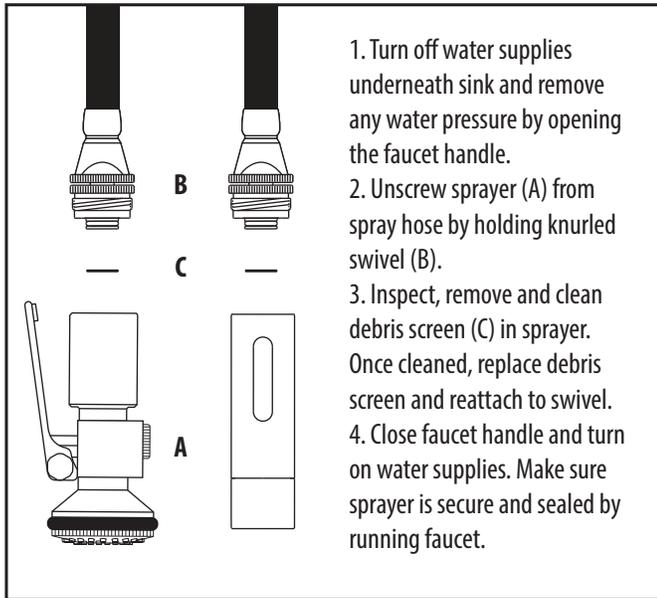


## CLEANING AERATOR - TOGGLE SPRAYER

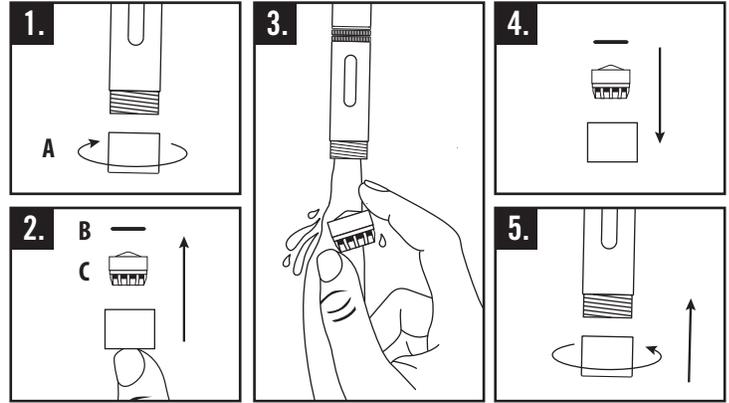







1. Gently unscrew and remove spout tip (A) by hand.
2. Remove O-ring (B). To remove aerator (C), push with finger from bottom.
3. Thoroughly rinse aerator with water until all debris is removed.
4. Place aerator, then O-ring back into spout tip.
5. Gently screw spout tip, by hand, snugly back onto spout.

## CLEANING AERATOR - LEVER SPRAYER




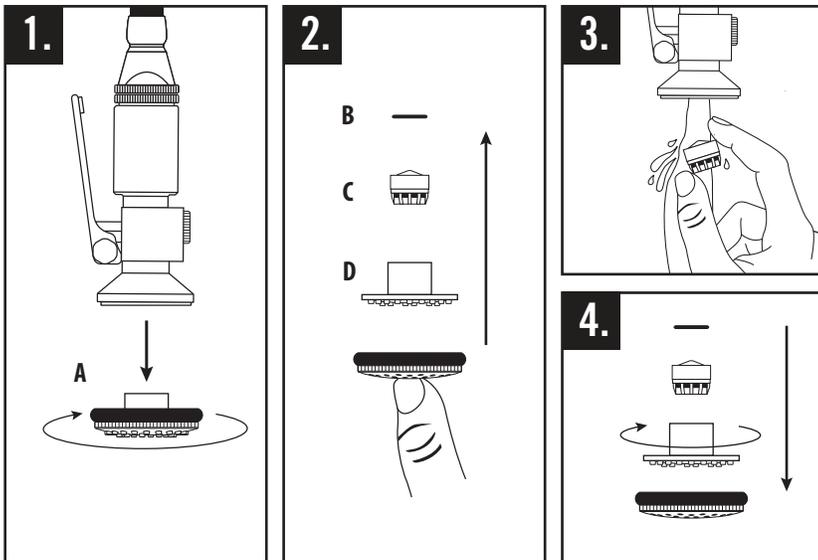






1. Gently unscrew and remove spray face (A) by hand.
2. To remove O-ring (B), aerator (C) and spray face insert (D), push with finger from bottom.
3. Thoroughly rinse aerator with water until all debris is removed.
4. Place spray face insert back into spray face and spin until it clicks into place. Next, place aerator and O-ring into spray face. Gently screw spray face, by hand, snugly back onto sprayer.

## INSTALL SOAP/LOTION DISPENSER (OPTIONAL)

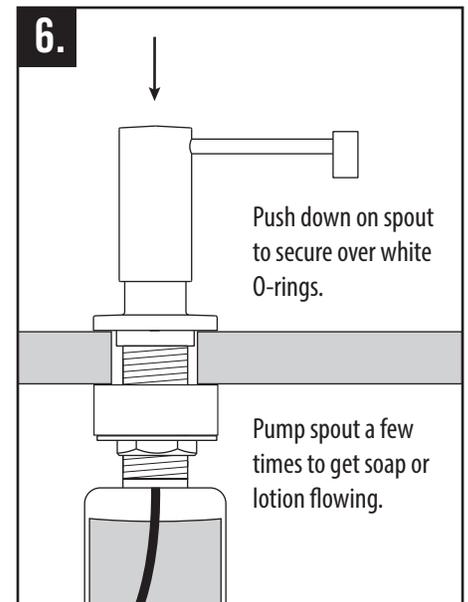
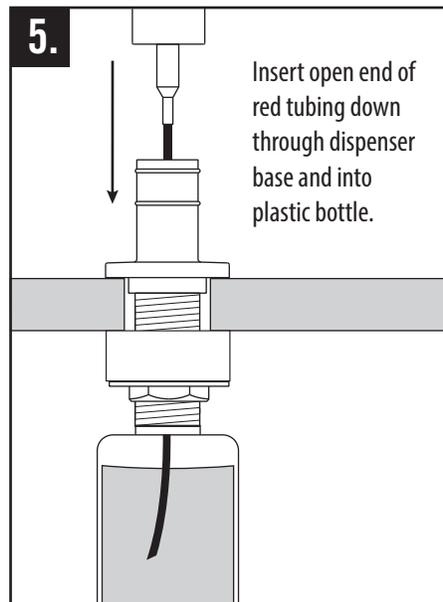
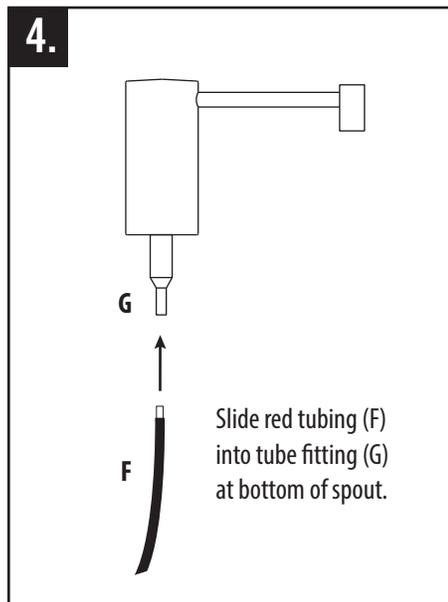
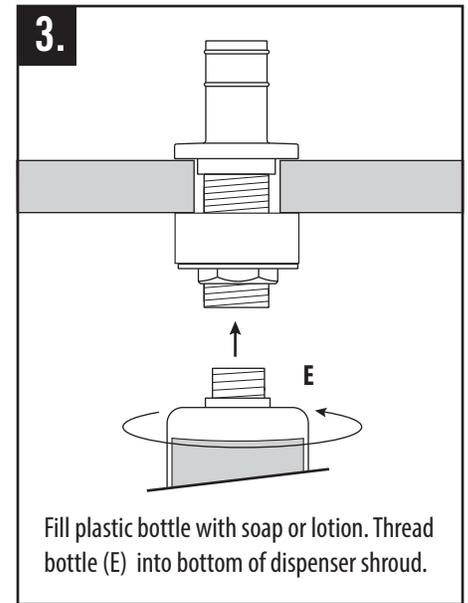
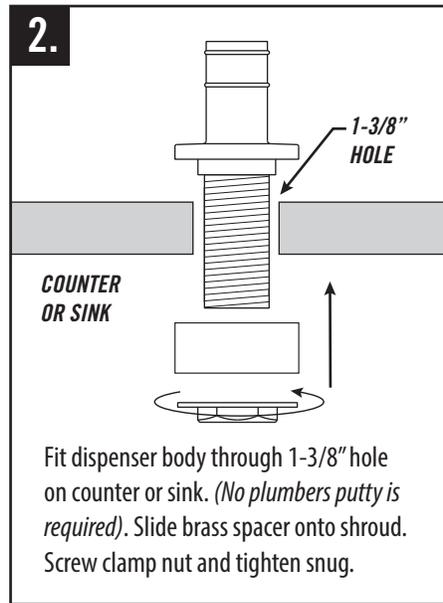
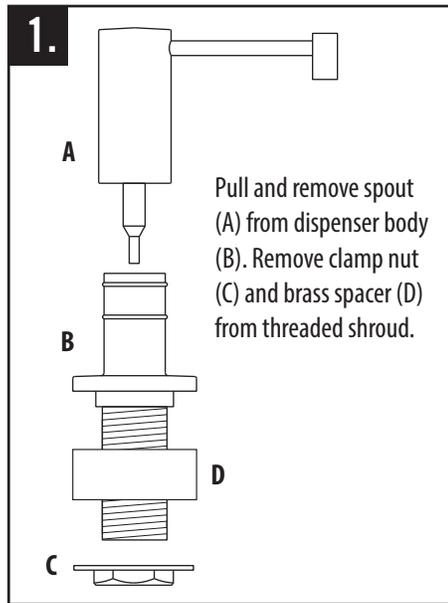


## INSTALL AIR SWITCH (OPTIONAL)

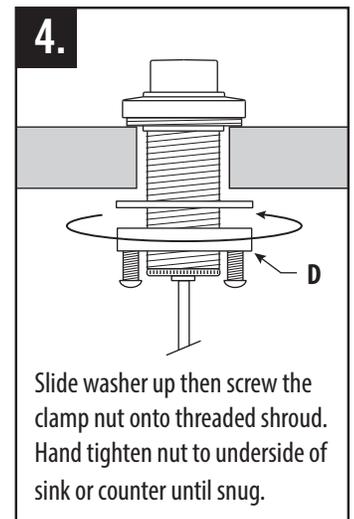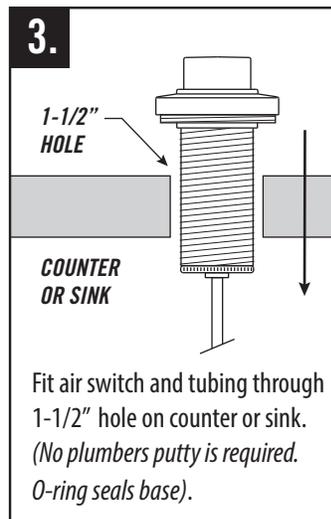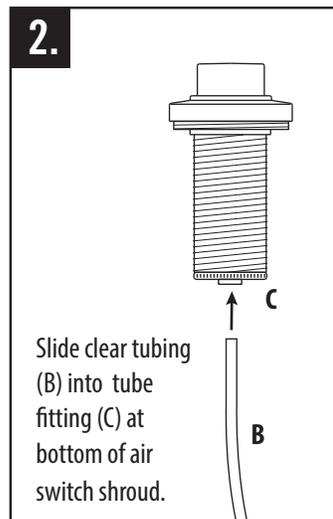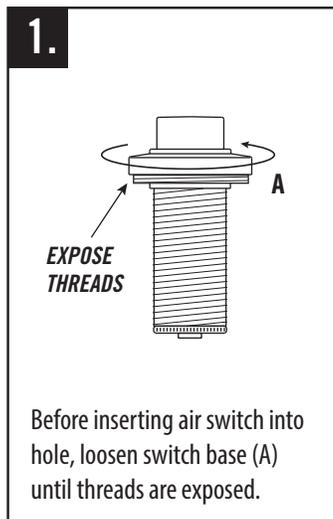

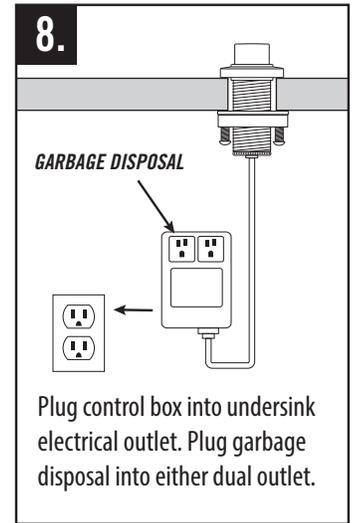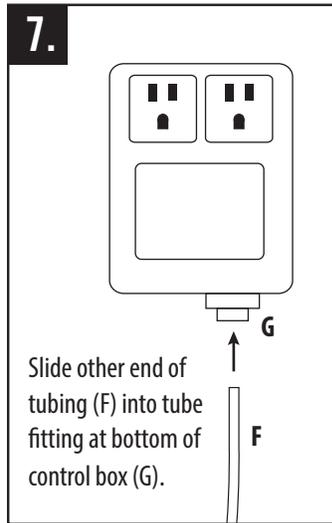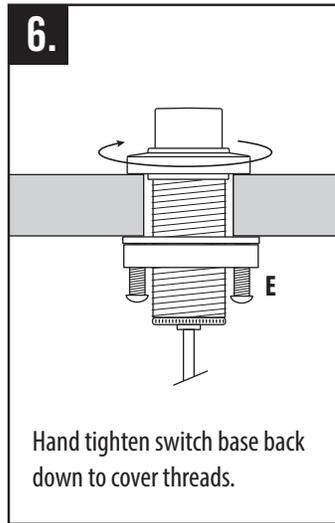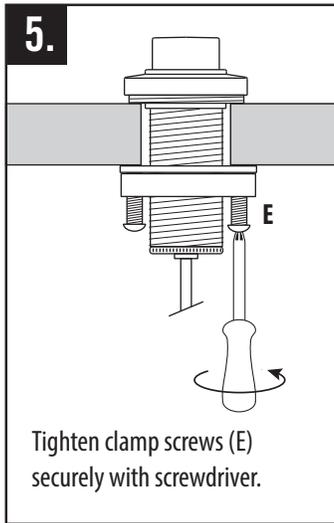

## INSTALL SINGLE PORT AIR GAP (OPTIONAL)

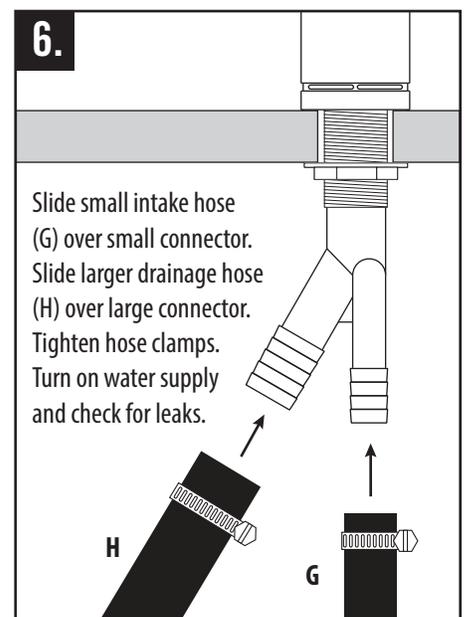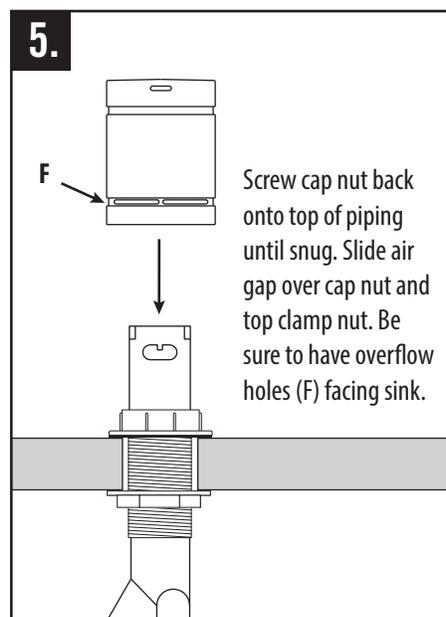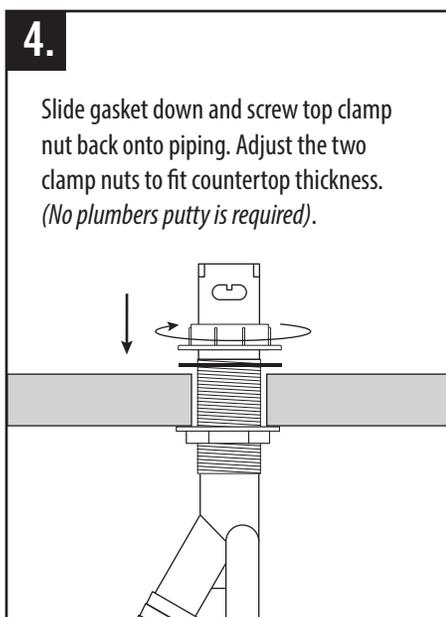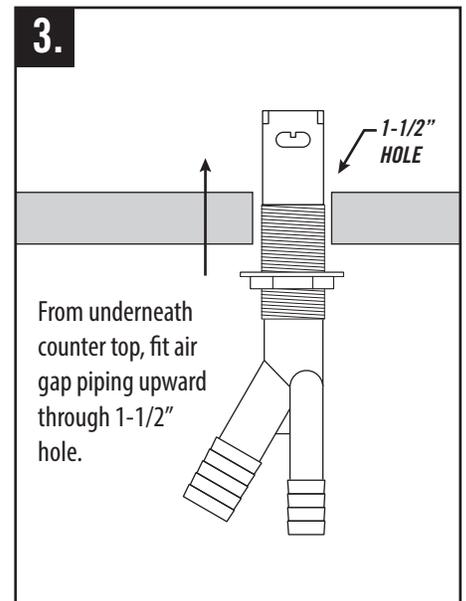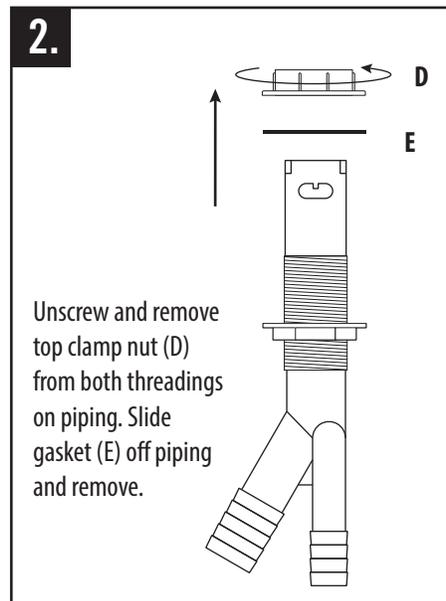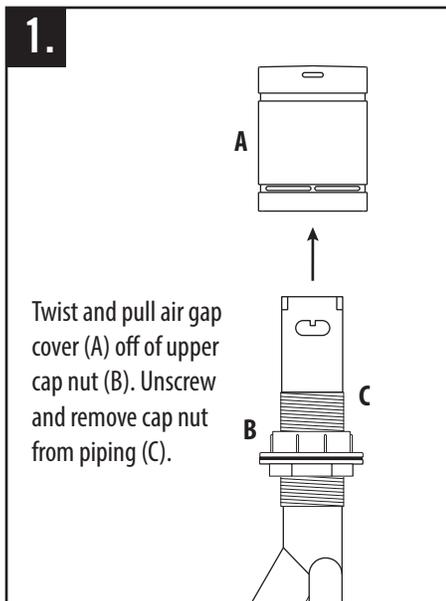

# INSTALL DUAL PORT AIR GAP (OPTIONAL)

