



MONARCH Series KITCHEN Faucet installation

Tools You Will Need




Adjustable Wrench




Pipe Tape




Groove joint plier

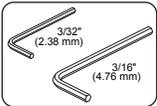


Allen Wrench

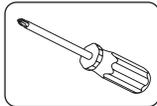

Phillips Screwdriver

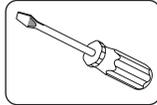


Flathead Screwdriver

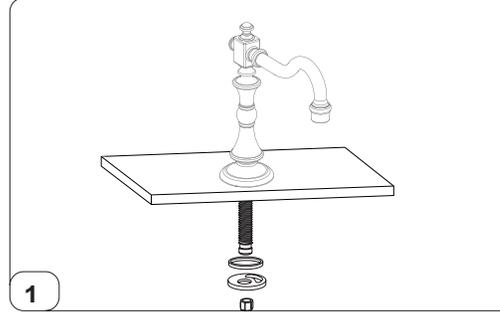

1

Install spout. Remove T connector and mounting hardware from stem of spout. Ensure gasket under rim of spout is firmly seated in groove. Mount spout through center hole of sink. From underneath sink, place rubber gasket and metal washer on spout stem. Make sure crescent-shaped slot in metal washer is to the back. Screw mounting nut onto stem until finger tight.

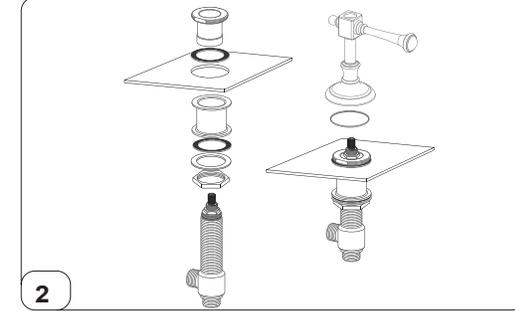


2

To install the valve bodies first loosen the bottom lock nut on the neck of the valve such that the valve has enough room when placed through the hole from under the counter top. Next, place (Optional) spacer over the valve body. From the bottom slide the valve body up the hole and position the valve body as desired. From the top place rubber washer and metal washer over the valve body so that the washer sits down against the counter top. Screw the adaptor to the top of the valve body. Once valve is in the desired position make sure that the adaptor nut sits securely over the washers. Tighten the bottom lock nut until valve body.


Place the handle and escutcheon over the adaptor and valve body stem. Make sure to install with handle in the off position.

Hint: At this point you can test the handle to make sure that the stem position lines up properly. Otherwise you may need to loosen the valve body and adjust the position. (Repeat for other side)

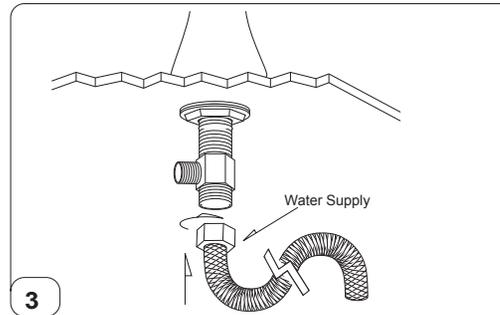


3

Attach water supply lines. Connect main water supply lines to bottom openings of handle valve stems.

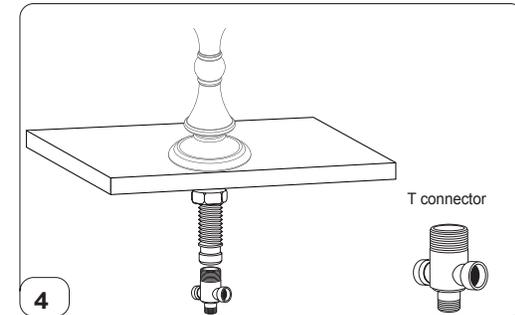

4

Screw T connector onto bottom of spout stem until it stops. Position T connector at a slight angle.

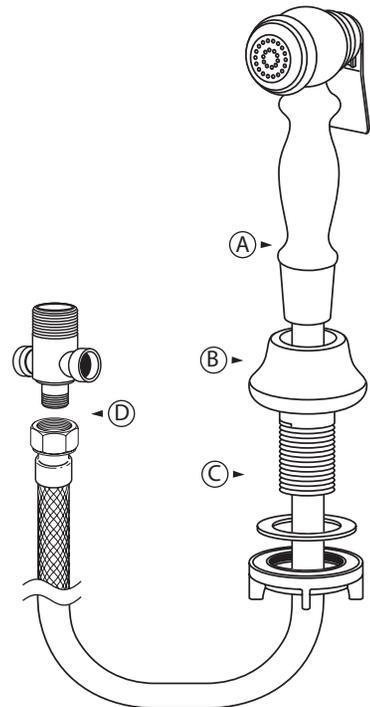

MOKTSxxMDX and MOKTSMNL only

Optional Side Sprayer Installation

Use washers and Teflon tape when necessary.


A. Connect the shower hose to the handheld shower. Push other end of the hose through the shower flange.

B. Insert a black rubber washer and then connect the hose to the bottom connector of the valve.

C. Connect all stainless steel braided water lines to the cold and hot nipples, and also to the spout nipple.


D. Install handle on the cartridge stem and tighten it by using the supplied set screw.

E. Run water for about two minutes and make sure all connections are working without any leakage.

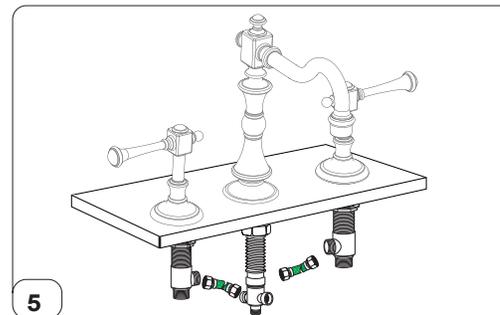

5

Connect water supply hoses first to T connector and then to handle valve stems.

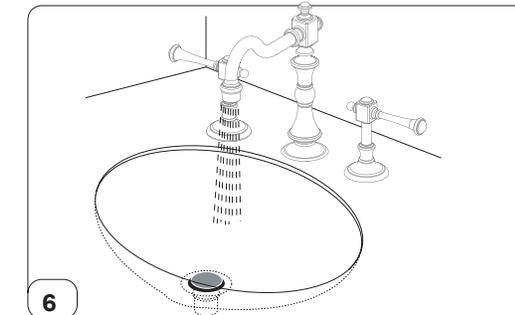

6

Flush system. Turn main water supply on. Turn on both faucet handles. Let run for two minutes. Replace aerator. Check for leaks.

Help Info? Please call Toll-FREE customer service line at 1-800-888-6604 for additional assistance service.