Tools You Will Need

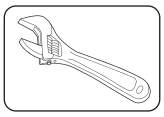
Adjustable Wrench

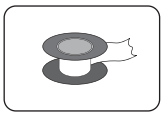
Pipe Tape

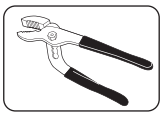
Groove joint plier

Silcone Caulking

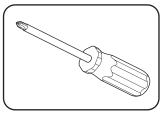
Phillips Screwdriver

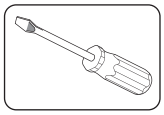
Flathead Screwdriver

Before Your Installation

- Read all instructions carefully.
- Assemble all tools.
- Turn off main water supply before removing old faucet and fixtures.
- Clean surface before installing new faucet.
- Insert a cloth or stopper into drain to prevent small parts from getting lost.
- HB recommends that when cleaning you HB faucet to only use soap and warm water. The use of any chemical substance will void finish warranty

Tips for Successful Installations

- Use joint compound or Teflon® tape on all threaded connections to prevent leaks.
- Use a soft cloth to protect the faucet's finish when using a wrench, pliers or other tools that could scratch the faucet.
- Tighten all hose connections by hand. Do not over tighten.
- Before turning main water supply back on, open several faucets around the house to prevent pressure from building up. Remove aerator from faucet before turning on water. Flush drain for several minutes before replacing aerator. DO NOT use joint compound or Teflon® tape to reconnect aerator.
- If you experience problems with the installation consult a professional plumber.

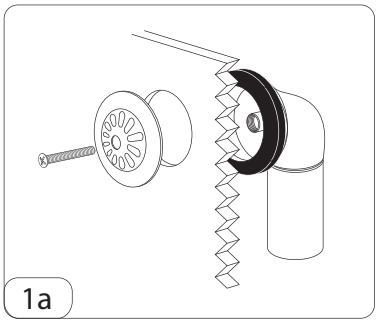

Mount overflow drain pipe to back side of tub wall. Use the thick washer to prevent any water leakage. Fasten the overflow grid to inside wall of teh tub by lining the hole up with the threads and screw down until tight.
(If you are using the plug and chain model (LT4183) be sure to place the eye loop at one end of the chain around the screw before installing)

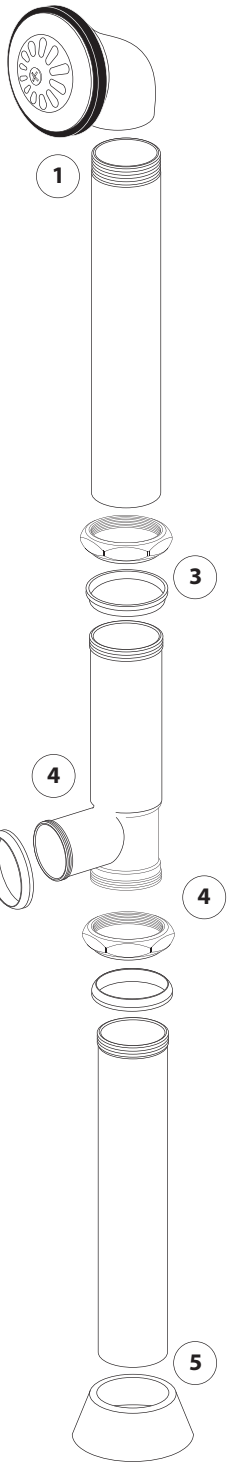

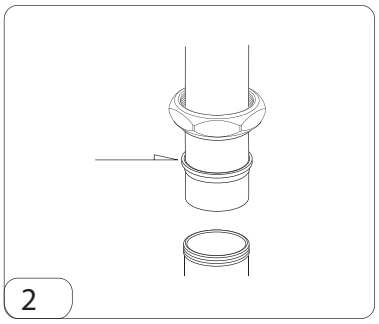

First slide the lock nut and packing onto the overflow drain pipe. Next, using the slip joint connection on the T elbow, slid the elbow onto the overflow drain pipe and line up such that the drain pipe on the bottom of the tub can be easily inserted. Once the T elbow lined up slide the packing all the way down and tighten the lock nut over the top until hand tight.

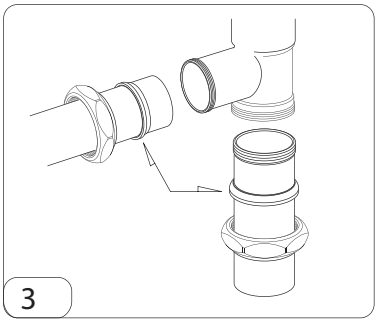

Next, slide lock nut and packing onto the bottom drain piece pipe and slide the pipe into the horizontal opening in the T elbow. Line up the drain piece with the drain hole in the tub. Do the same for the bottom tail pipe.

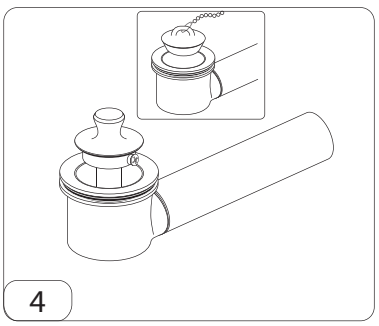

Install the drain grid with washer through the top of the drain hole. Screw down until tight. Make sure to adjust drain plug machanism (lift and turn / plug) To install lift & turn mechanism loosen the screw on the side of the lift plug. Line the screw hole up with the flat side of the stem sticking up from the drain, and tighten the screw in all the way.

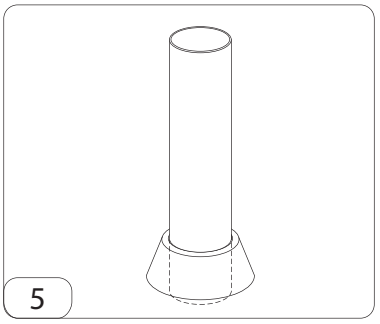

After all components are installed place the base flange over the bottom tail pipe before connecting to the waste plumbing line. Connect the waste and overflow to plumbing lines in the floor. Check for any leakage in the assembly.

11100 Dana Circle Cypress, CA 90630
Tel : 800-888-6604 | Fax : 888-455-5007
www.huntingtonbrass.com