




ASSEMBLY INSTRUCTION MODEL#KEN-2200-PN

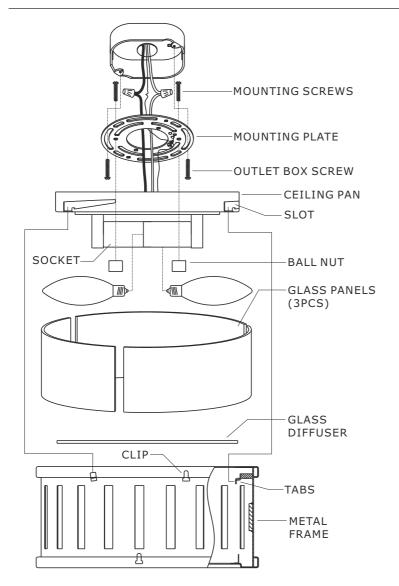



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate


local electrical codes.




You will need 2- Candelabra Base Bulb 40 Watts Recommended 60 Watts Max. USE LED BULBS FOR EXTENDED USE This fixture is Damp rated

How to install

- Install the mounting screws into the matching holes in the mounting plate. Secure the mounting plate to outlet box with the outlet box screws.
- 2. Connect fixture wires to supply wires in outlet box.
- Raise ceiling pan allowing the mounting screws to protrude through the holes in the ceiling pan, and secure with the ball nut.
- 4. Install the bulb(not included) into the socket.
- 5. Slide the glass diffuser onto the bottom of metal frame and secure it with clips.
- 6. Slide the glass panels inside the metal frame and secure it with clips.
- 7. Raise the metal frame and insert the tabs on the metal frame into the slot of ceiling pan. Secure it by turning it clockwise.

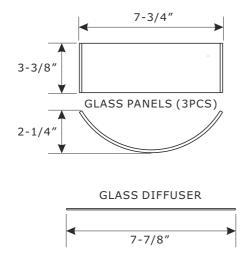

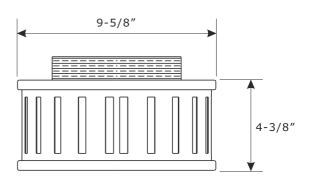

HOW TO REPLACE THE BULB:

PUSH UP THE METAL FRAME AND TURN IT COUNTERCLOCKWISE TO REMOVE IT FOR RELAMPING.





ASSEMBLY INSTRUCTION MODEL#KEN-2200-PN

Part Number

Part Numbers

- A. (1)-Mounting hardware
- B. (1)-Ceiling pan
- C. (2)-Socket
- D. (2)-Ball nut
- E. (3)-Glass panel #XRF2200GLA7.75IN
- F. (1)-Glass diffuser #XRF2200DIF7.875IN
- G. (1)-Metal frame

