







KINGSTON BRASS

THE TRADITION OF FINE BRASS

Safe & Anti-Slide Acrylic Bath Tub Installation

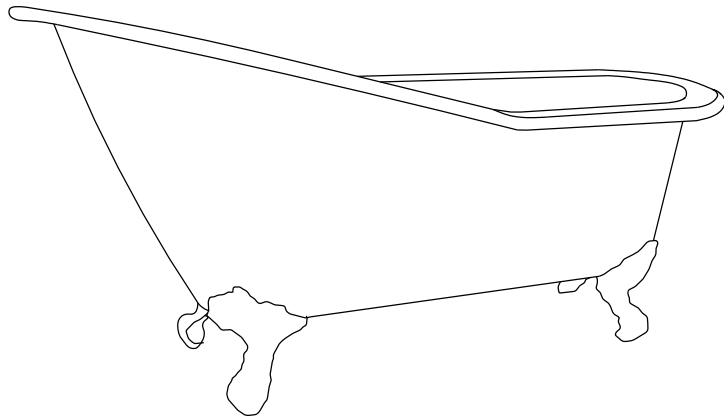

Parts:

Short Bolts & Long Bolts	Bolts Washer	Metal Washer & Locknut	Washer	L TYPE MOUNTING BRACKET
				
2 Pcs	4 Pcs	8 Pcs	12 Pcs	4 Pcs

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS

TECHNICAL SUPPORT E-mail: service@kingstonbrass.com


12775 Reservoir Street, Chino, CA91710

TOOLS REQUIRED:

Socket Set (including 5/8" & 9/16")

Rubber Mallet

Adjustable Wrench

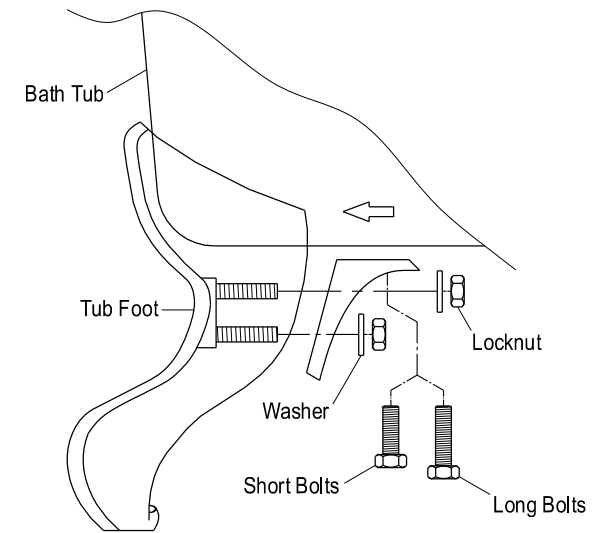

Installation Steps:

- Step 1. Turn tub over and set on non-abrasive mat, insert pyramid bolts into the mounting slot at the bottom of the tub
- Step 2. Align the feet with the bolt, insert leg, washers and nut and tighten loosely, the legs marked "F" are to be installed in the front side of the tub, (drain side) and the legs marked "C" are to be installed in the back (side opposite drain side).
- Step 3. Adjust leg for proper fit, it might be necessary to tap with rubber mallet to insure a good position.
- Step 4. Retighten bolts
- Step 5. When all four legs have been installed, turn tub over carefully as not to damage the finish.
- Step 6. If tub wobbles, adjust leg by raising or lowering leg adjustment bolt at the bottom of each leg.

Cleaning

Clean with a damp cloth only.

Avoid using metal or abrasive polishes.