



ENGINEERING EXCELLENCE

Installation Guide

Handheld Showerset:





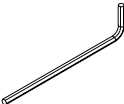
- 6MT410
- 6AM410

This product meets the following standards:

- ASME A112.18.1
- ANSI A117.1

Thank you for purchasing this pioneer quality product.

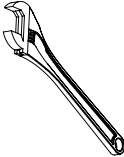Tools Required


				
Adjustable Wrench	Teflon Tape	Rags	3/32" Allen Wrench	1/8" Allen Wrench

Prior to Installation

- Observe all local plumbing and building codes before you begin installation.
- Carefully shut off both hot and cold water supplies.
- Plug the tub drain with a soft cloth to prevent intrusion of debris or the loss of any parts.
- Pioneer reserves the right to make changes in the design of faucets without notice.

Handheld Showerset Installation

- Apply teflon tape to the inlet from main or diverter valve (F). Install the drop ell and support holder with flange (E) to the inlet from main or diverter valve (F). Use silicon caulk around the flange (E) to create water tight seal. Install vacuum breaker (D) underneath the drop ell (E). Connect the hose (B) to the vacuum breaker (E). Do not forget to put the washer (C) inside hose connection nut. The other end of the hose (B) connect to handheld showerhead (A).
- Turn on the inlet water supply. check for any leaks.

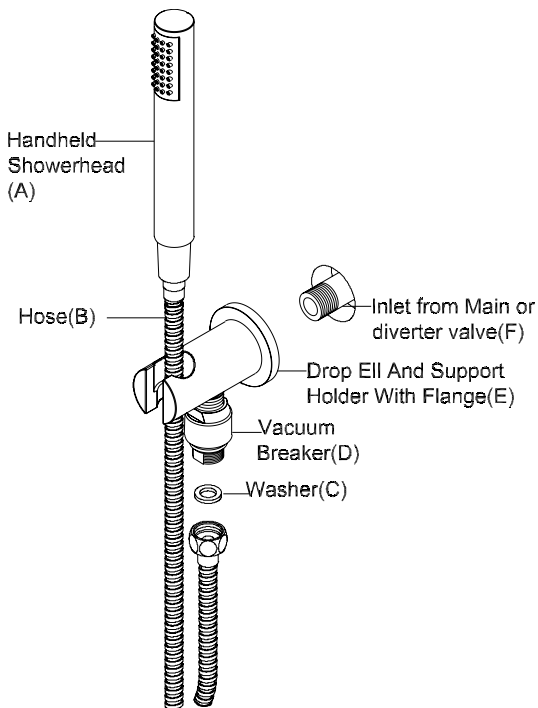

For more care information or trouble shooting inquiries about your Pioneer Product, please see the contact information on the back page.



ENGINEERING EXCELLENCE

3325 S. Garfield Ave. | Commerce, CA 90040
Telephone: (800) 338-9468 | (323) 888-8873 | Fax: (323) 888-9515
Hours: M - F, 7:30am to 5:00pm PST
www.pioneerind.com