INSTALLATION INSTRUCTIONS

70740-01-xx - 4 PC Roman Tub Filler

• 70740-xx

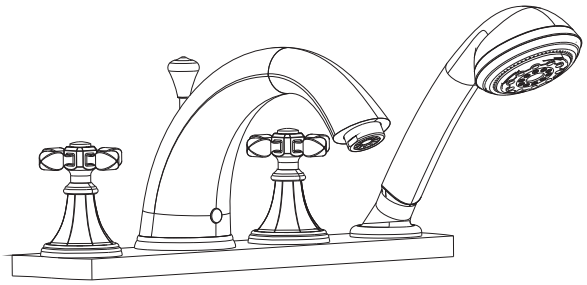

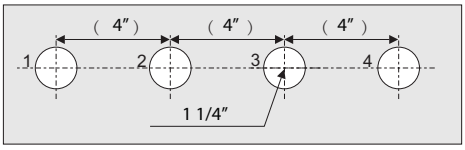

Countertop

1.

Cut moulting holes to install the faucet. Remove the components (mounting nut and washers) which are attached to the bottom of the faucet.

Notes Verify the dimensions against the actual faucet.

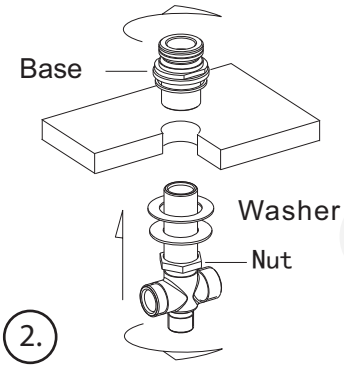

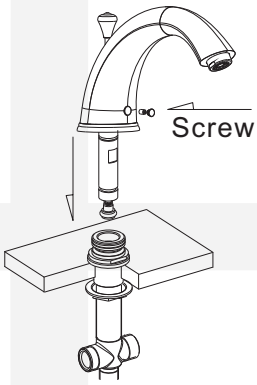

2.

Installing the spout

Take off lock nut washer and other components from spout assembly. Slide decorative base seat and washer on the spout and then insert the spout in the installing hole and tighten it up to the deck.

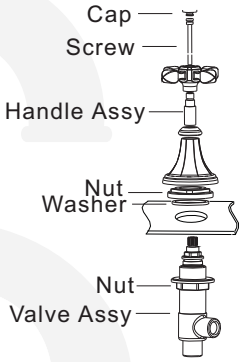

3.

Install the valves

Remove handle and escutcheon and insert valve through hole from below. Adjust handle and escucheon to the appropriate position and install handle onto valve.
Adjust the valve position and tighten up nut to the countertop.

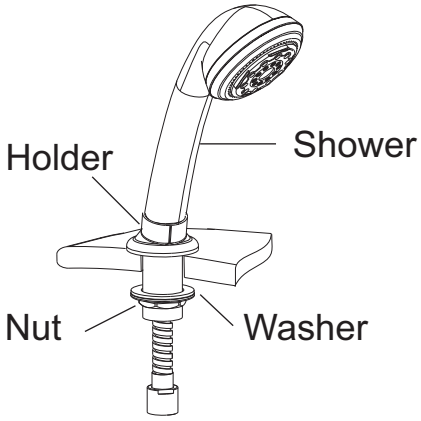

4.

install handshower holder

Take off lock nut and washer, put washer in the ring slot on holder and insert shower holder in the hole from above Tightening up lock nut with washer after adjusting the shower holder to appropriate position

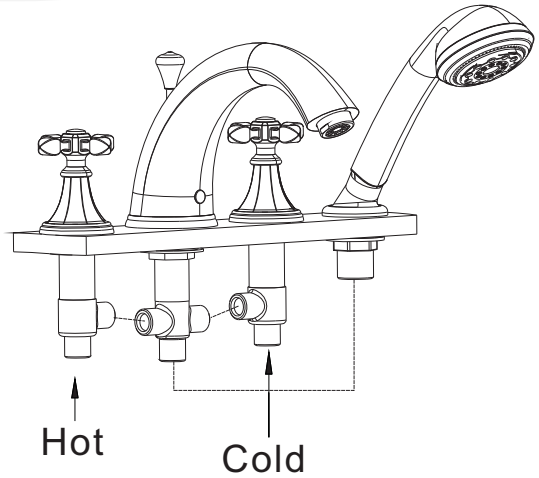

5.

Connecting to the water supply

Connect hoses following the figure

After all connections are tightened up turn on the faucet and flush through water in order to remove impurities and check for any leaks.

11100 Dana Circle Cypress, CA 90630
Tel : 800-888-6604 | Fax : 888-455-5007
www.huntingtonbrass.com