


## Slide Bar for Adjustable Height Personal Hand Shower Installation

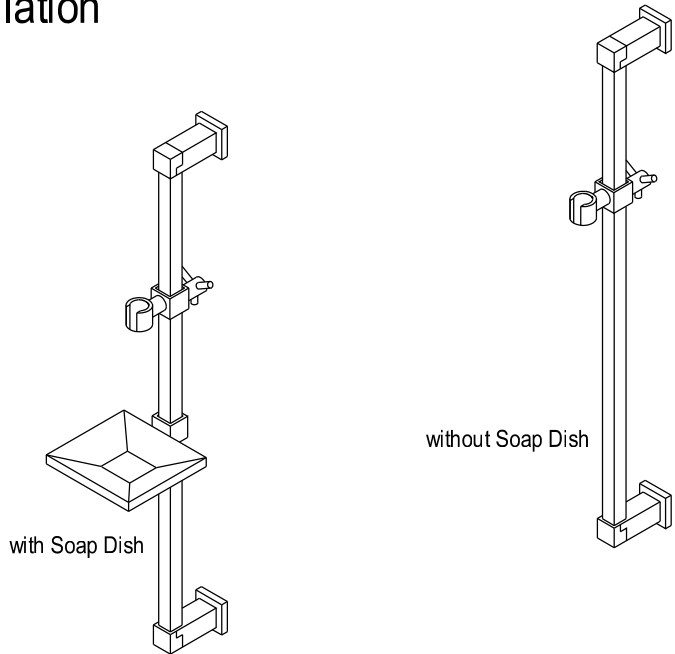

### Parts:

24" Adjustable Slide bar	Soap Dish Plate	Mounting Hardware
	X1	X2


[www.kingstonbrass.com](http://www.kingstonbrass.com)

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS

TECHNICAL SUPPORT E-mail: [service@kingstonbrass.com](mailto:service@kingstonbrass.com)

12775 Reservoir Street, Chino, CA91710

### TOOLS:

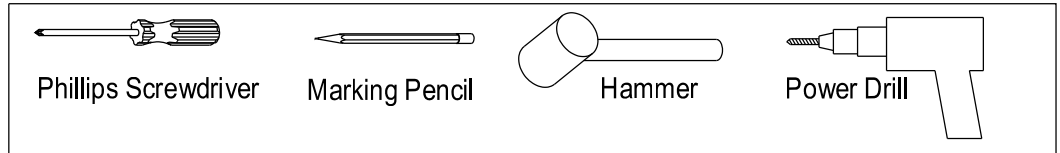

### Installation for Slide Bar for Adjustable Height Personal Hand Shower

<p>1</p>	<p>1. Slip the Soap Dish Plate into the slide bar.</p>	<p>2</p>	<p>2. Put slide bar on wall and mark holes for top and bottom mounting brackets with pencil or marker.</p>
<p>3</p>	<p>3. Remove slide bar from the wall and drill hole on the marking hole. Gently tap wall anchors into the holes until they are flushing with the wall surface.</p>	<p>4</p>	<p>4. Attach slide bar to wall, Input the screws into the wall anchor and firm them.</p>

### Legal Disclaimer :

Slide bar is not a handle or safety grab bar.

Slide bar is only for use of height adjustment of hand shower.

This bar does not support ADA compliant code and does not ever use to support human weight of push or pull.